


SALA JERUSALEM

Rider luces 2026

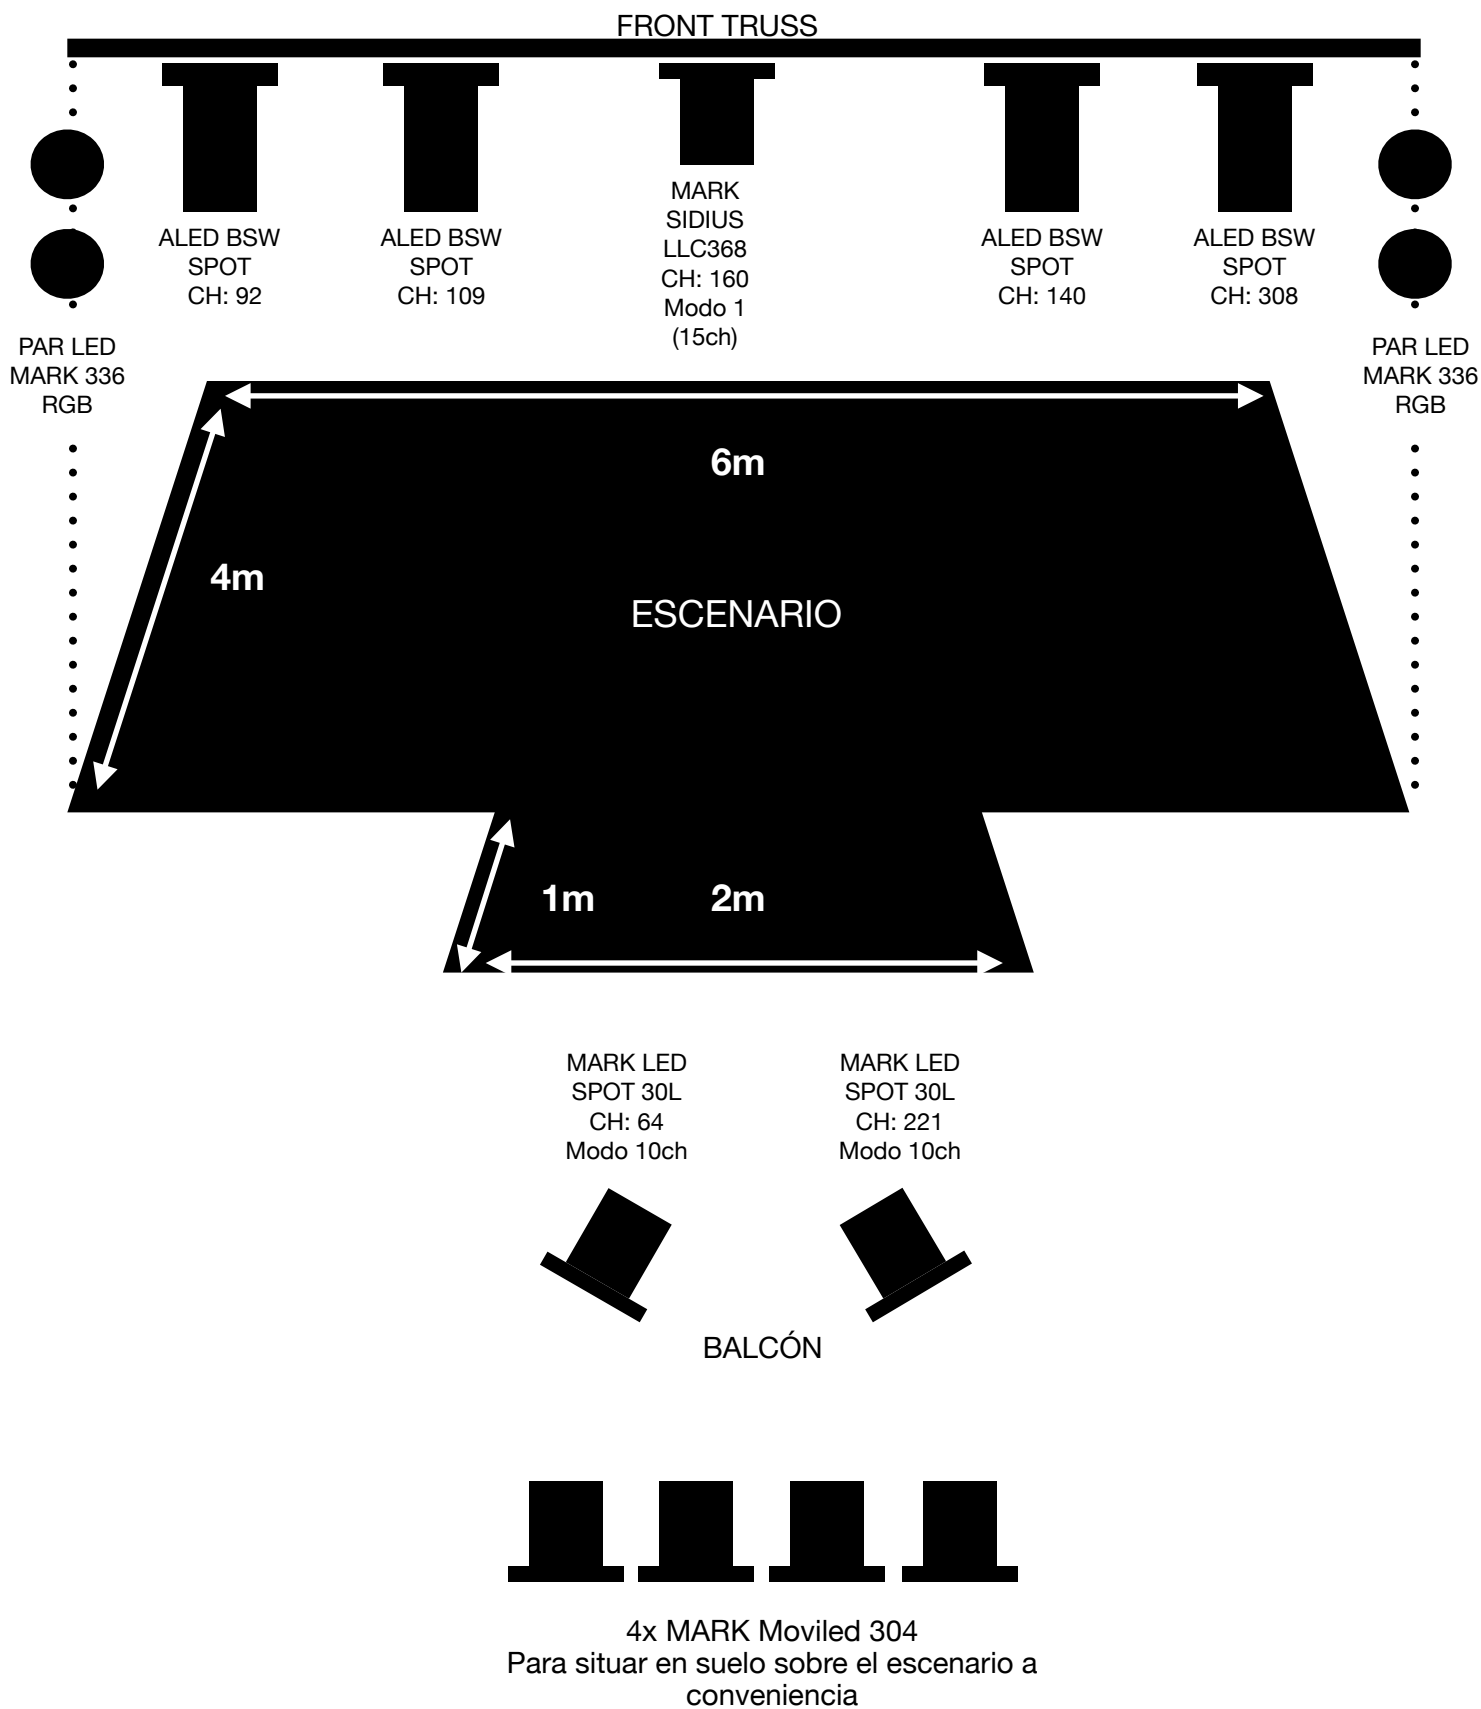

LIBRERIA ALED BSW 280 SPOT

CH	DETAIL
1	PAN
2	PAN FINE
3	TILT
4	TILT FINE
5	PAN TILT SPEED
6	DIMMER
7	SHUTTER/STROBE
8	COLOR PLATE
9	FIXED GOBO
10	GLASS GOBO
11	GLASS GOBO ROTATION
12	FOCUSING
13	ZOOM
14	PRISM
15	PRISM ROTATING
16	FROST
17	RESET

CH	DETAIL	FUNCTION	VALUE
1	PAN	000-255	PAN
2	PAN FINE	000-255	PAN FINE
3	TILT	000-255	TILT
4	TILT FINE	000-255	TILT FINE
5	PAN TILT SPEED	000-255	FROM FAST TO SLOW
6	DIMMER	000-255	FROM DARK TO BRIGHT
7	SHUTTER/STROBE	000-003 004-250 215-255	BRAKE LIGHT OFF STROBE FROM SLOW TO FAST LIGHT SWITCH OPEN (CONTROLLED BY DIMMING CHANNEL)
8	COLOR PLATE	000-002 003-005 006-008 009-011 012-014 015-017 018-020 021-023 024-026 027-029 030-032 033-035 036-038 039-041 042-044 045-047 048-050 051-053 054-056 057-059 060-159 160-205 206-255	WHITE LIGHT WHITE LIGHT + COLOUR 1 COLOUR 1 COLOUR 1+ COLOUR 2 COLOUR 2 COLOUR 2+ COLOUR 3 COLOUR 3 COLOUR 3 + COLOUR 4 COLOUR 4 COLOUR 4 + COLOUR 5 COLOUR 5 COLOUR 5 + COLOUR 6 COLOUR 6 COLOUR 6 + COLOUR 7 COLOUR 7 COLOUR 7 + COLOUR 8 COLOUR 8 COLOUR 8 + COLOUR 9 COLOUR 9 COLOUR 9 + WHITE LIGHT COLOUR LINEAR FORWARD FLOW (FROM FAST TO SLOW) REVERSE FLOW (FROM SLOW TO FAST)

CH	DETAIL	FUNCTION	VALUE
9	FIXED GOBO	000-009	WHITE
		010-019	FIXED GOBO 1
		020-029	FIXED GOBO 2
		030-039	FIXED GOBO 3
		040-049	FIXED GOBO 4
		050-059	FIXED GOBO 6
		060-069	FIXED GOBO 7
		070-079	FIXED GOBO 8
		080-089	FIXED GOBO 9
		090-099	WHITE SHAKE (FROM SLOW TO FAST)
		100-104	FIXED GOBO 1 SHAKE (FROM SLOW TO FAST)
		105-109	FIXED GOBO 2 SHAKE (FROM SLOW TO FAST)
		110-114	FIXED GOBO 3 SHAKE (FROM SLOW TO FAST)
		115-119	FIXED GOBO 4 SHAKE (FROM SLOW TO FAST)
		120-124	FIXED GOBO 5 SHAKE (FROM SLOW TO FAST)
		125-129	FIXED GOBO 6 SHAKE (FROM SLOW TO FAST)
		130-134	FIXED GOBO 7 SHAKE (FROM SLOW TO FAST)
		135-139	FIXED GOBO 8 SHAKE (FROM SLOW TO FAST)
		140-144	FIXED GOBO 9 SHAKE (FROM SLOW TO FAST)
		145-200	FORWARD FLOW (FROM FAST TO SLOW)
		201-255	REVERSE FLOW (FROM SLOW TO FAST)
10	GLASS GOBO	000-009	WHITE
		010-019	GOBO 1
		020-029	GOBO 2
		030-039	GOBO 3
		040-049	GOBO 4
		050-059	GOBO 5
		060-069	GOBO 6
		070-079	GOBO 7
		080-089	GOBO 1 SHAKE (FROM SLOW TO FAST)
		090-099	GOBO 2 SHAKE (FROM SLOW TO FAST)
		100-109	GOBO 3 SHAKE (FROM SLOW TO FAST)
		110-119	GOBO 4 SHAKE (FROM SLOW TO FAST)
		120-129	GOBO 5 SHAKE (FROM SLOW TO FAST)
		130-139	GOBO 6 SHAKE (FROM SLOW TO FAST)
		140-149	GOBO 7 SHAKE (FROM SLOW TO FAST)
		150-200	FORWARD FLOW (FROM FAST TO SLOW)
		201-255	REVERSE FLOW (FROM SLOW TO FAST)
11	GLASS GOBO ROTATION	000-0127 128-191 192-255	ANGLE ADJUSTEMENT REVERSE FROM FAST TO SLOW FORWARD FROM SLOW TO FAST
12	FOCUSING	000-255	GOBO CLARITY FROM FAR TO NEAR
13	ZOOM	000-255	FROM BIG TO SMALL
14	PRISM	000-127 128-255	NONE PRISM
15	PRISM ROTATING	000-127 128-191 192-255	PRISM ANGLE ADJUSTEMENT REVERSE ROTATION (FROM FAST TO SLOW) FORWARD ROTATION (FROM SLOW TO FAST)
16	FROST	000-127 128-255	NONE INSERT FROST
17	RESET	000-249 250-255	NONE RESET